 


LINK MANAGER LM2

for GPS Collar

The Link Manager LM2 provides the interface between your PC or Laptop and the GPS-Plus collar. It is used to exchange data and to upgrade new firmware in your GPS-Plus collar. It can be used easily to access the collar by an external PC and to supply the collar with external power in case of an empty battery pack of the collar.

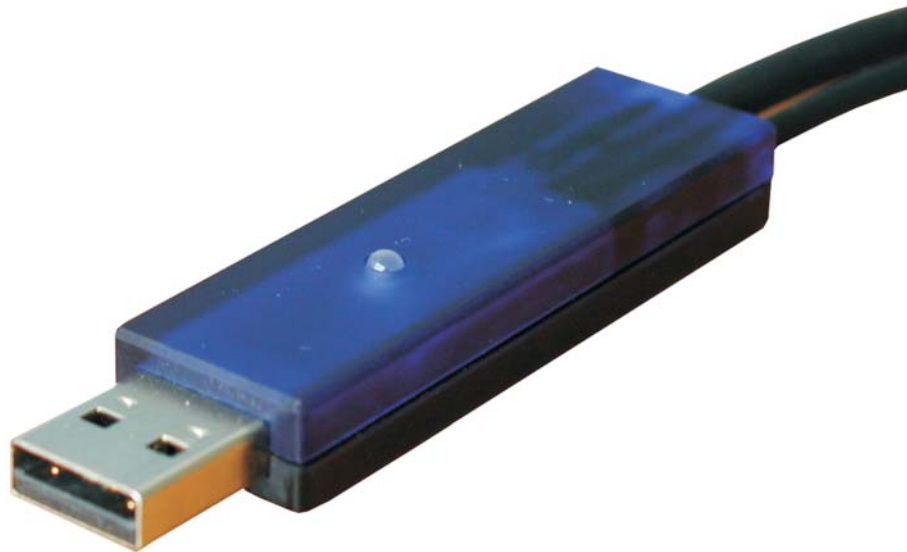

Easy Use

The access from the PC to the collar via the Link Manager is quit simple. Just plug & play the Link Manager connected to a GPS collar and a PC and mind the LED for operational control. All data transfer activities can be done by the PC software very comfortably.

Easy Control

 
During all operation modes the Link Manager can be supervised by the user via a single three colour LED which indicates data transfer and the state of the Link Manager .

Easy Supply

The Link Manager is completely supplied by the PC's USB port, giving the operator a maximum of mobility and flexibility even during outdoor operation. An additional power interface is implemented to supply the collar in case of an empty battery pack.



Technical Specifications

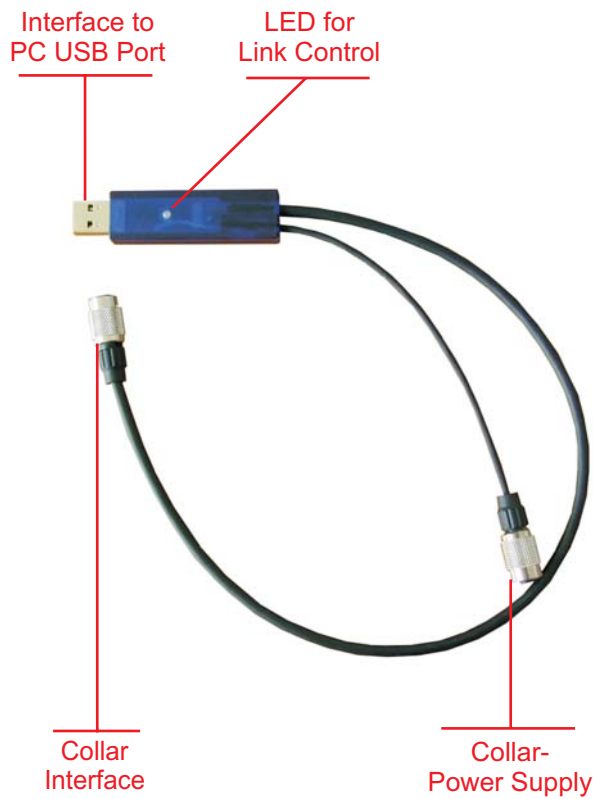

Mechanics

Dimensions: 73 x 18 x 9 mm (without cables)
Weight: 40 g (including cables)

Power

 
Supply Voltage: 4.5 .. 5.5 VDC, 100 mA max, provided by the PC's USB port

Interface

PC: USB port
Collar: Special serial link cable
Collar Power: 3.3V, 80 mA max.

LED Function

Green flashing = Standby
Green = Data transfer
Yellow = Only before programming via serial interface
Red = Programming new collar firmware

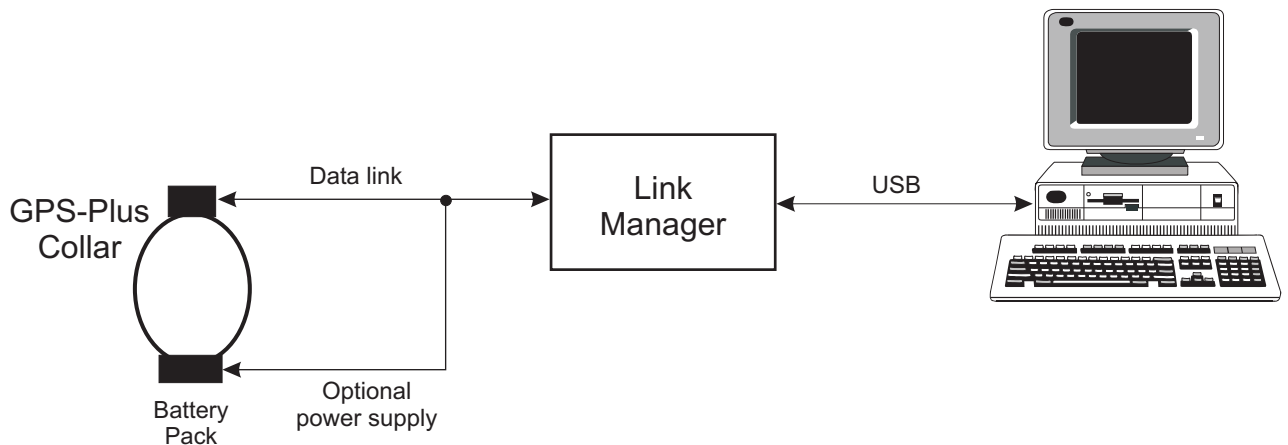

Supplied Accessories:

- USB Extension Cable
- Driver CD